

## Rock Sliders

2020+ JEEP GLADIATOR JT

SRGL-04



### TOOLS REQUIRED

- Ratchet
- 10mm Socket
- 13mm Socket
- 16mm Socket
- 18mm Socket

### SKILL LEVEL

- Novice/Intermediate
  - 1 (you) to 2 persons
- Little skill level required, you can easily install it by yourself however, additional help will be useful

### TIME REQUIRED

- 2.5 Hours
- Time to install this should only take Approximately: 2.5 Hours.

## WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner’s manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.  
Customer Service: 855-680-9595

*DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.*

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

*Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information*

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



# INSTALLATION MANUAL

## STEP 1

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from.

### Hardware Included:

- |                       |                      |
|-----------------------|----------------------|
| (2) M10x40 Bolts      | (2) M8 Flat Washers  |
| (10) M10x25 Bolts     | (2) M8 Lock Washers  |
| (16) M10 Flat Washers | (16) M6 Flat Washers |
| (16) M10 Lock Washers | (16) M6 Nuts         |
| (4) M10 Nuts          |                      |
| (2) M8x20 Bolts       |                      |



## STEP 2

If equipped with factory rock guards or steps, remove them along with all brackets until the pinch weld is clear as shown.






# INSTALLATION MANUAL

## STEP 3

Using the factory hardware and an 18mm socket, begin by installing the front and rear brackets to the existing front and rear body mounts (Take notice of the orientation in our pictures).



*NOTE: Leave these loose so they can be adjusted as needed throughout installation.*

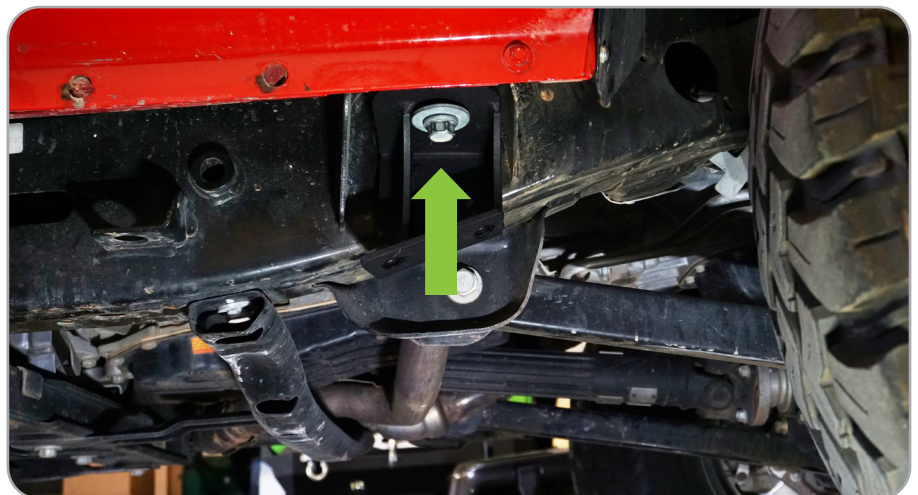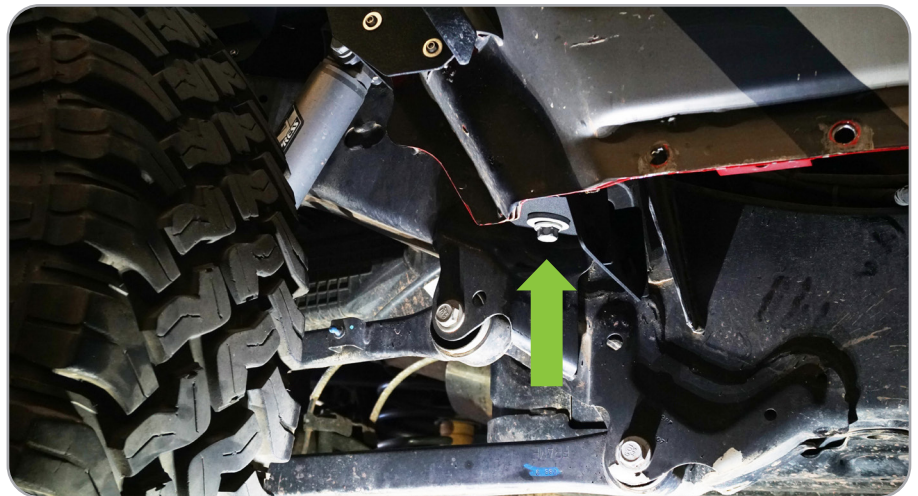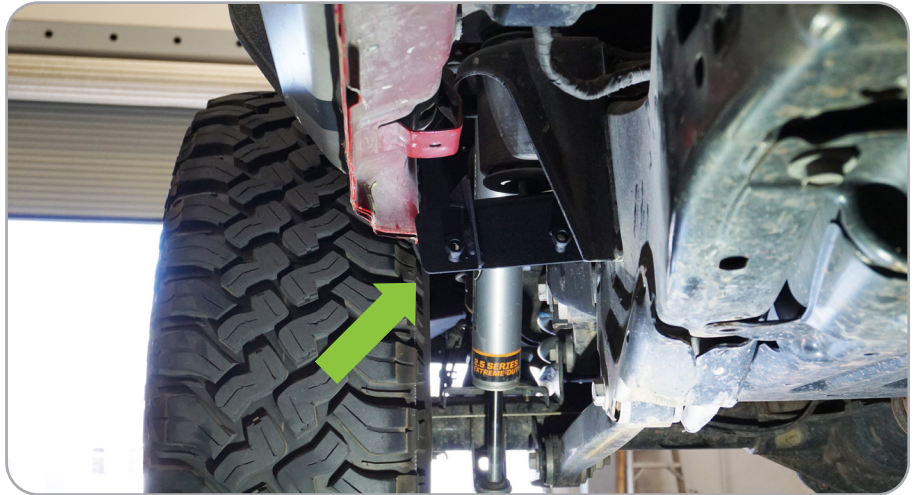

# INSTALLATION MANUAL

## STEP 4

Install bracket onto the rear section of the slider using a 16mm Socket and provided M10 hardware.

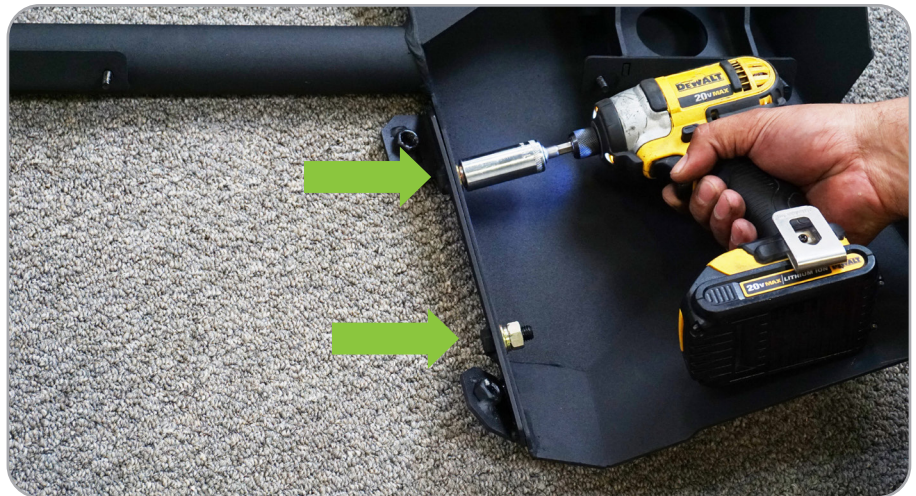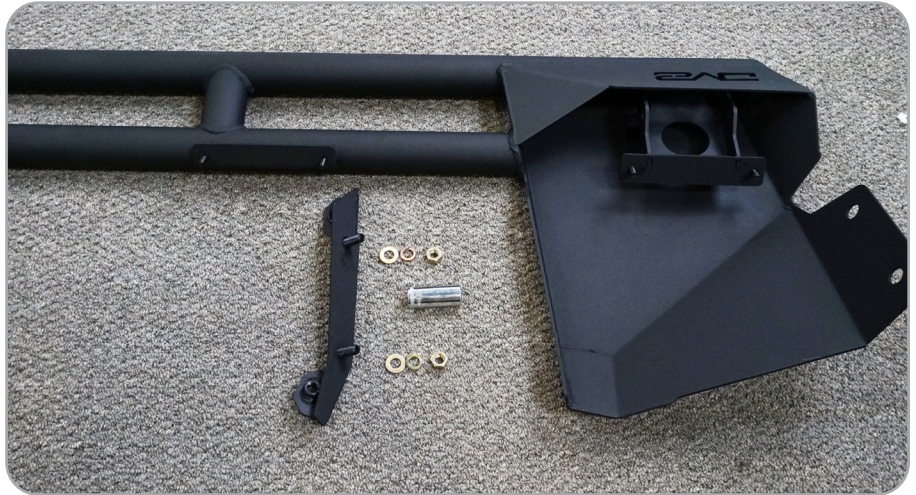

# INSTALLATION MANUAL

## STEP 5


Install the sliders along the vehicle, using the studs as a guide. All studs should protrude through the holes in the body. NOTE: An extra pair of hands will make this process easier.



## STEP 6

Using a 16mm socket, install two M10x25 bolts and hardware to the front section of the slider, loosely securing it to the front bracket.

NOTE: The slider and bracket may require maneuvering for installation.

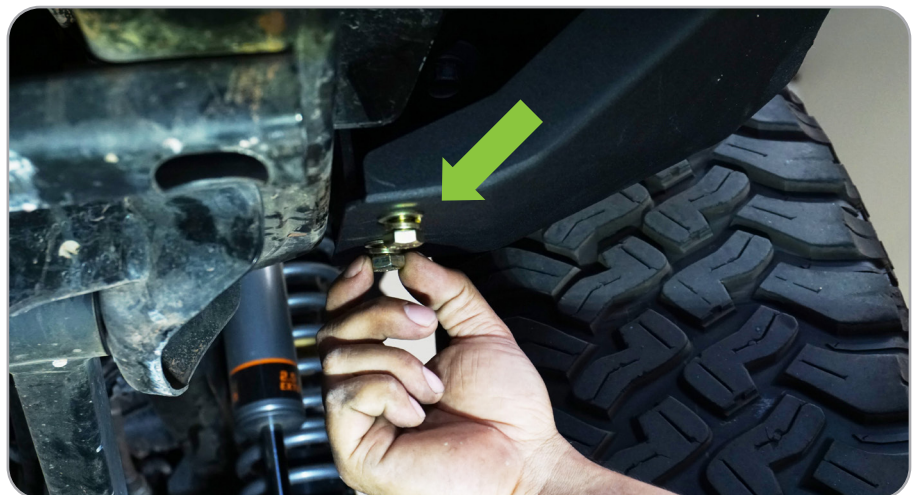

# INSTALLATION MANUAL

## STEP 7

Using a 16mm socket, install two M10x25 bolts and hardware to the rear of the slider, loosely securing it to the bracket.

*NOTE: The slider and bracket may require maneuvering for installation.*



## STEP 8


Install the center factory body bolt into the center body mounts using an 18mm, leaving it loose to allow for adjustment.



# INSTALLATION MANUAL

## STEP 9

Install the provided M6 hardware to the studs protruding through body on the underside of the vehicle by hand threading them to start. After all nuts have been started on the threads, secure with a 10mm socket.

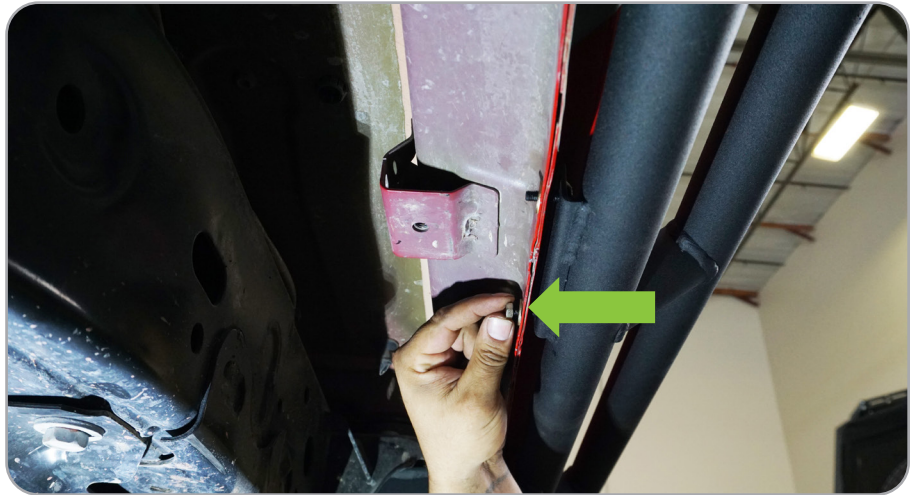

# INSTALLATION MANUAL

## STEP 10

Using a 16mm Socket secure the M10x25 bolts loosely holding the sliders to front and rear brackets.







# INSTALLATION MANUAL

## STEP 11

Using an 18mm socket, secure the rear, center, and front factory bolts.

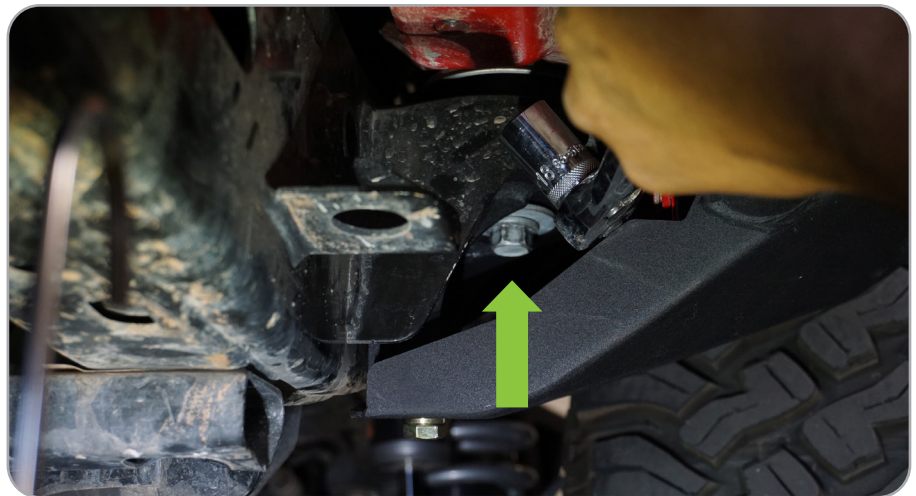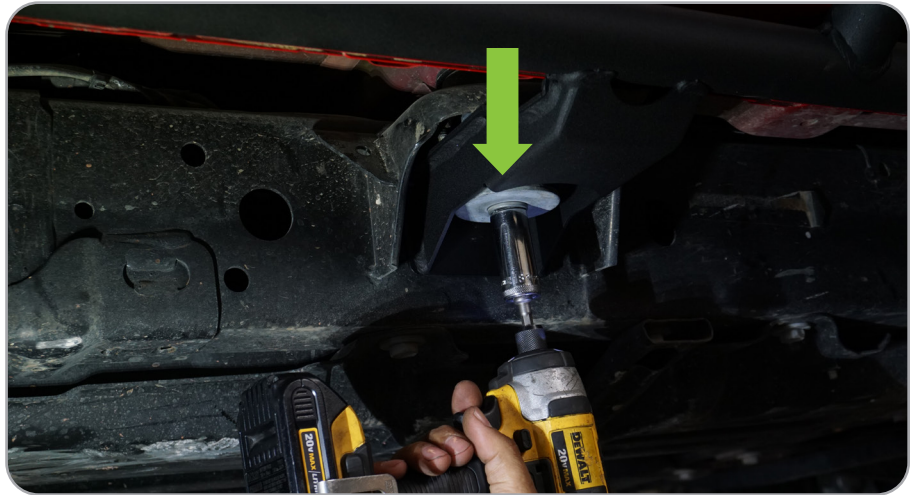

# INSTALLATION MANUAL

## STEP 12

Install the deflector plate. Using a 16mm socket install the M10x40 bolt, and M10x20 Bolt with hardware in the section connecting with the slider to the body, but do not tighten. The longer M10x40 bolt is being used in the first picture, in the lower section of the plate. Using a 13mm socket, install the remaining M8x25 bolt and hardware securing it to the body mount. Secure all bolts on the deflector plate.



## STEP 13

Double check all hardware is secure.



# INSTALLATION MANUAL

## STEP 14

Repeat steps on other side of the vehicle.

